

 






 




BRITISH STANDARD PIPE PARALLEL						
						
BPM1	BTM1	BF1	BF4	BF9	BF9C	BFF1
02-03	02-03	02-03	02-03	02-03	02-03	02-03
04-03	04-03	04-03	04-03	04-03	04-03	04-03
04-04	04-04	04-04	04-04	04-04	04-04	04-04
06-04	06-04	06-04	06-04	06-04	06-04	06-04
06-05	06-05	06-05	06-05	06-05	06-05	06-05
06-06	06-06	06-06	06-06	06-06	06-06	06-06
08-06	08-06	08-06	08-06	08-06	08-06	08-06
08-08	08-08	08-08	08-08	08-08	08-08	08-08
10-08	10-08	10-08	10-08	10-08	10-08	10-08
10-10	10-10	10-10	10-10	10-10	10-10	10-10
12-10	12-10	12-10	12-10	12-10	12-10	12-10
12-12	12-12	12-12	12-12	12-12	12-12	12-12
16-12	16-12	16-12	16-12	16-12	16-12	16-12
16-16	16-16	16-16	16-16	16-16	16-16	16-16
20-16	20-16	20-16	20-16	20-16	20-16	20-16
20-20	20-20	20-20*	20-20*	20-20*	20-20	20-20
24-20*	24-20	24-20	24-20	24-20	24-20	24-20
24-24	24-24*	24-24*	24-24*	24-24*	24-24	24-24
32-32	32-32*	32-32*	32-32*	32-32*	32-32	32-32


 
BANJO	
	
BM1	BB1
10-03	04-04
12-04	06-06
14-04	08-06
14-05	08-08
14-06	10-10
16-06	12-12
18-06	16-16
18-08	-
22-10	-
26-12	-
30-16	-




BSP Banjo Bolt
#BBB1
Metric Banjo Bolt
#BMB1

Some larger size fittings available at Pirtek USA upon request.
Use a "C" adaptor to check BSPP threads.
Use a "Z" bonded washer when using a "C" adaptor in a port.

SAE 45° FLARE			
			
SM1	SF1	SF4	SF9
05-03	05-03	05-03	05-03
06-03	06-03	06-03	06-03
07-04	07-04	07-04	07-04
08-04	08-04	08-04	08-04
10-04	10-04	10-04	10-04
10-06	10-06	10-06	10-06
12-08	12-08	12-08	12-08

NOTE: Only dash 10-06 fittings are stocked, all other sizes are replaced by JIC equivalent.
Use a P-10-10 adaptor to check threads.

30° FLARE JIS METRIC/JIS BSPP	
	
JMF1	JBF1
12-04	04-04
14-04	06-06
16-06	08-08
18-06	12-12
20-06	16-16
22-06	-
22-08	-
24-08	-
24-10	-
30-12	-
33-12	-
33-16	-

FRENCH METRIC GAZ/MM		
		
GM1	GF1	MMM1
20-06	20-06	20-04
24-08	24-08	20-06
30-10	30-10	24-06
36-12	36-12	24-08
45-16	45-16	30-10
52-20	52-20	36-12
-	-	45-16
-	-	52-20

Use "C" adaptor to check JBF threads.
Use "L" adaptor to check JMF threads.

NOTE: * After the fitting denotes this fitting is also available in interlock. Example: IJM-26-20